

ONE-TOUCH FITTING

- Fitting and tube can be easily connected and disconnected in one motion.

Tube Attachment

Disconnection - A secure connection is made by inserting the tube so that the ends touch, and disconnection is

completed by simply pressing the sleeve with your finger and pulling the tube, which takes only 1-2 seconds.

No tools are required for connecting or disconnecting the tube.

PRESSURE RESISTANCE	10.5Kg f/cm²(1050Kpa)
MAX.WORKING PRESSURE	7Kg f/cm²(700Kpa)
MIN. WORKING PRESSURE	1Kg f/cmឺ(100Kpa)
ADJUSTED TEMP & FLUID TEMP	5~60°C

PWT	08	1/8
Model type	Hose size (φD)	Screw size

TUBE OUTRTER DIA

Metric Size				Inch Size							
CODE	4	6	8	10	12	16	5/32	1/14	5/16	3/8	1/2
Tube outer diameter mm	ф4	ф6	ф8	ф10	ф12	ф16	ф5/32	ф1/14	ф5/16	ф3/8	ф1/2

Thread Type And Size

Metric Size						
CODE	M5	M6	M8	M10	M12	
Tube outer diameter mm	M5*0.8	M6*1	M8*1	M10*1	M2*1.25	

Taper Pipe Thread55							
CODE	01	02	03	04			
Tube outer diameter mm	R1/8	R1/4	R3/8	R1/2			

PWT Product Code

PWT Product Code						
MODEL(φ D-T)						
Tube(Metric)-R Thread(PT)			Tube(Inch)-Thread(NPT)			
PWT 04-M5	PWT 08-04	PWT 16- 04	PWT 5/32-N01	PWT 3/8-N01		
PWT 04-01	PWT 10-01	PWT 04- M6	PWT 5/32-N02	PWT 3/8-N02		
PWT 04-03	PWT 10-02		PWT 1/4-N01	PWT 3/8-N03		
PWT 06- M6	PWT 10-03		PWT 1/4-N02	PWT 3/8-N04		
PWT 06-01	PWT 10-04		PWT 1/4-N03	PWT 1/2-N02		
PWT 06-02	PWT 12-02		PWT 5/16-N01	PWT 1/2-N03		
PWT 06-03	PWT 12-03		PWT 5/16-N02	PWT 1/2-N04		
PWT 06-04	PWT 12-04		PWT 5/16-N03			
PWT 08-01	PWT 12-01		PWT 5/16-N04			
PWT 08-02	PWT 06- M5		PWT 5/32-UNF			
PWT 08-03			PWT 1/4- UNF			